SAFETY PRECAUTIONS

- 1. Check if an electric leakage occurs in the set.
- When servicing current applying parts, unplug prior to servicing.
- In case of testing with power injecting, wear rubber gloves to prevent electric shock.
- If you use any appliances, check regular current, voltage and capacity.
- 5. Don't touch metal products in cold freezer room with wet hand. It may cause frostbite.
- Prevent water flowing to electric elements in mechanical parts.
- 7. When sloping the set, remove any materials on the set, especially thin plate type(ex,: glass plates or books.).
- When servicing evaporator part, wear cotton gloves without fail. It is to prevent wound by sharp fin of evaporator.
- Leave a breakage freezing cycle to a heavy service center. The gas in cycle inside may soil ambient air.

SERVICING PRECAUTIONS


AIR RECHARGING IN COMPRESSOR


Test the refrigeration system by connecting it electrically before refilling operation. This is necessary to ascertain the function of the motor-compressor and identify the defects immediately. If the defects have been found, empty the old system of eventual R-12 residue by breaking off the end of the extension piece at its narrow point. (Figure 1)

Replace the filter and any damaged components. Unsolder and pull off the piece remaining inside the service tube and then attach an extension completely with male Hansen and last, solder it to the same tube again. (Figure 2)

It is necessary to execute the soldering operation with valve open so that the fumes caused by oil residue can come out freely without blowholes between two tubes during heating the point to be soldered.


The extension fitted with the male Hansen is connected to the female fitting of the vacuum pump tube. (Figure 3) Air evacuating from the system begins as soon as the pump starts. The refrigeration system must be kept under vacuum until the reading on the low-pressure gauge indicates vacuum (0 absolute, -1 atm., -760 mm Hg) in any case it is advisable to keep the pump running for about 30 minutes. (Figure 4)

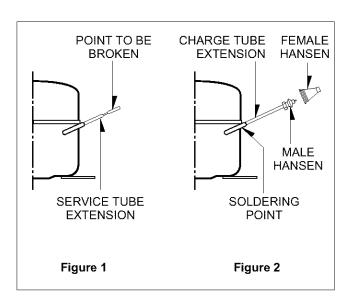

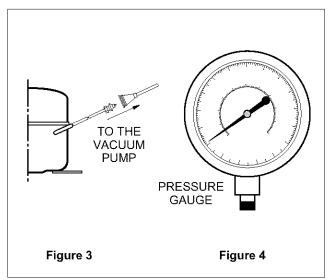


In case that a considerable leakage occurs and to stop the vacuum pump will be necessary and add a small quantity of Freon to the system, if vacuum should not be obtained (pressure gauge can't fall to 1 atmosphere.), start the refrigeration unit and find the leakage with the special leak-finder. When the defective soldering point is visible, re-do it after opening the extension tube valve and reestablishing the normal outside pressure inside the group.

Because the melted alloy is sucked into the tubes and block them, the pressure must be rebalanced when vacuum is in the system in soldering. As soon as the vacuum operation is over, add the quantity in grams of R-12 to the refrigeration system. Remember that every system has an exact quantity of R-12 with a tolerance of ±5 grams than can be added. (Figure 5)

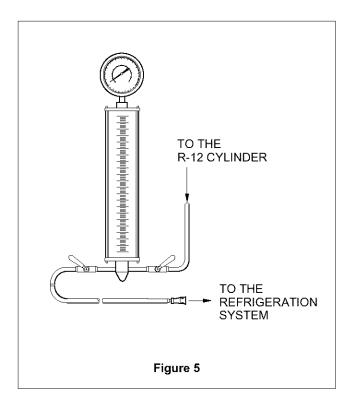

Before performing this operation (if the vacuum pump and refilling cylinder are connected), make sure that the valve placed between the vacuum pump and refilling tube are closed to keep the Freon for adding to the system. (Figure 6)

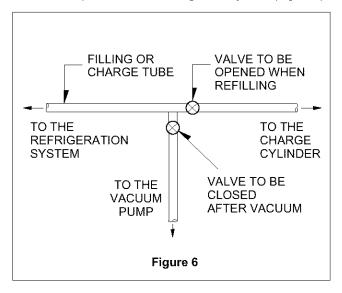

In addition, check the graduated scale on the cylinder for the quantity of R-12 to be added, for example, if we have 750 grams of Freon in the cylinder and must add 165 grams to the group, this amount will be reached when R-12 has dropped to 585 grams, remembering that the indicator shows a lower limit of meniscus. Do this after choosing the scale corresponding to the gas pressure different scales reported as the same gas pressure indicated by the pressure gauge on the top of the column.

To make R-12 flow into the system, open the valve placed at the base of the cylinder and connected to the filling tube. The amount of Freon cannot be added to the system all at once because it may cause a blocking of motor-compressor. Therefore, proceed by adding original quantity of about 20-30 grams and close the valve immediately.

The pressure rises and the motor-compressor must start, sucking the gas and making the pressure go down again. Regulate the valve again, maintaining the same manner until reaching the quantity of R-12 established for the system being charged. When the system is running, the suction pressure must be stabilized from 0.30 to 0.6 atmosphere.

AIR RECHARGING IN COMPRESSOR


Test the refrigeration system by connecting it electrically before refilling operation. This is necessary to ascertain the function of the motor-compressor and identify the defects immediately. If the defects have been found, empty the old system of eventual R134a residue by breaking off the end of the extension piece at its narrow point. (Figure 1) Replace the filter and any damaged components. Unsolder and pull off the piece remaining inside the service tube and


then attach an extension completely with male Hansen and

last, solder it to the same tube again. (Figure 2)

It is necessary to execute the soldering operation with valve open so that the fumes caused by oil residue can come out freely without blowholes between two tubes during heating the point to be soldered.


The extension fitted with the male Hansen is connected to the female fitting of the vacuum pump tube. (Figure 3) Air evacuating from the system begins as soon as the pump starts. The refrigeration system must be kept under vacuum until the reading on the low-pressure gauge indicates vacuum (0 absolute, -1 atm., -760 mm Hg) in any case it is advisable to keep the pump running for about 60 minutes. (Figure 4)

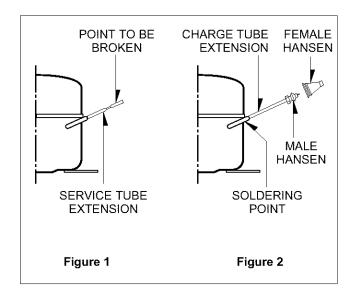

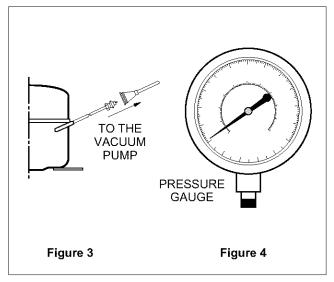


In case that a considerable leakage occurs and to stop the vacuum pump will be necessary and add a small quantity of Freon to the system, if vacuum should not be obtained (pressure gauge can't fall to 1 atmosphere.), start the refrigeration unit and find the leakage with the special leak-finder. When the defective soldering point is visible, re-do it after opening the extension tube valve and reestablishing the normal outside pressure inside the group.

Because the melted alloy is sucked into the tubes and block them, the pressure must be rebalanced when vacuum is in the system in soldering. As soon as the vacuum operation is over, add the quantity in grams of R134a to the refrigeration system. Remember that every system has an exact quantity of R134a with a tolerance of ±5 grams than can be added. (Figure 5)

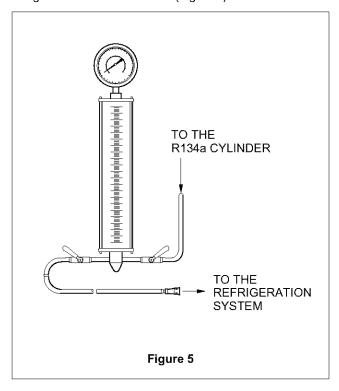

Before performing this operation (if the vacuum pump and refilling cylinder are connected), make sure that the valve placed between the vacuum pump and refilling tube are closed to keep the Freon for adding to the system. (Figure 6)

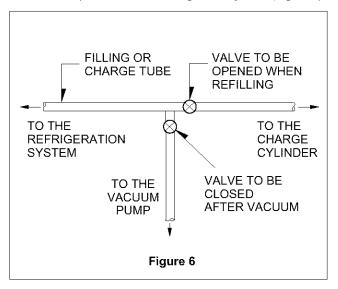

In addition, check the graduated scale on the cylinder for the quantity of R134a to be added, for example, if we have 750 grams of Freon in the cylinder and must add 165 grams to the group, this amount will be reached when R134a has dropped to 585 grams, remembering that the indicator shows a lower limit of meniscus. Do this after choosing the scale corresponding to the gas pressure different scales reported as the same gas pressure indicated by the pressure gauge on the top of the column. To make R134a flow into the system, open the valve placed at the base of the cylinder and connected to the filling tube. The amount of Freon cannot be added to the system all at once because it may cause a blocking of motor-compressor. Therefore, proceed by adding original quantity of about 20-30 grams and close the valve immediately.


The pressure rises and the motor-compressor must start, sucking the gas and making the pressure go down again. Regulate the valve again, maintaining the same manner until reaching the quantity of R134a established for the system being charged. When the system is running, the suction pressure must be stabilized from 0.10 to 0.4 atmosphere.

SPECIFICATIONS

| ITEMS | SPECIFICATIONS | |
|---------------------|----------------|--|
| DOOR TYPE | 1 DOOR | |
| NET CAPACITY | 94 / | |
| CONDENSER TYPE | WALL CONDENSER | |
| | (FLUSH BACK) | |
| DEFROSTING SYSTEM | MANUAL | |
| TEMPERATURE CONTROL | KNOB DIAL | |

| | | | 1 | | |
|-------------|------------|------------------------|--------------|-------------|--|
| ITEMS | | SPECIFICATIONS | | | |
| INSULATIO | N | DOOR | POLYURETHANE | | |
| | | CABINET | POLYU | RETHANE | |
| EVAPORATOR | | ROLL BOND TYPE | | | |
| DIMENSION | | 463(W)X830(H)X500(D)mm | | | |
| NET WEIGHT | | 22 Kg | | | |
| REFRIGERANT | | R-12(67g) | R-134a(60g) | | |
| LUDDIOANT | VS S | Series | HTS-150 | FREOL a 22G | |
| | COMPRESSOR | | (200cc) | (200cc) | |
| LUBRICANT | NS S | Series | HTS-150 | FREOL a 22G | |
| | COV | /IPRESSOR | (180cc) | (180cc) | |
| | | | | | |

PARTS IDENTIFICATION

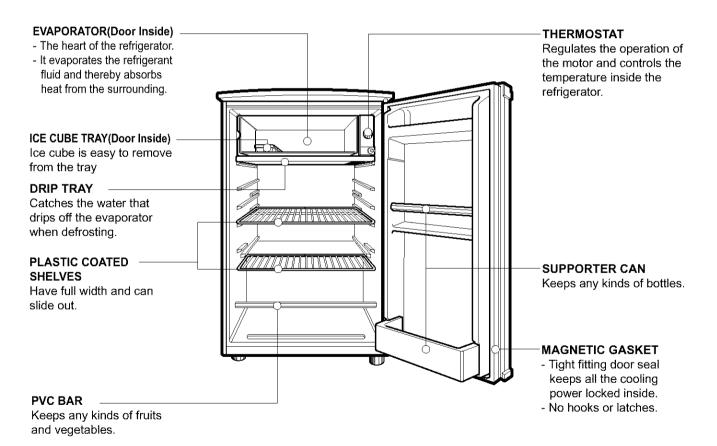


NOTE: This is a basic model. The shape of refrigerator is subject to change.

DISASSEMBLY


A. DOOR

 Loosen 3 screws holding an upper hinge to separate the door body. (Figure 7)

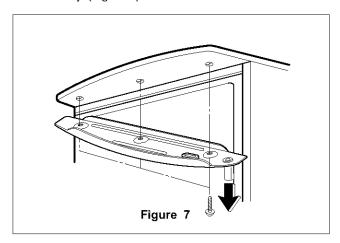


B. THERMOSTAT

- 1. Pull Knob Dial.
- 2. Loosen 1 screw holding the case and pull it out to remove the Thermo cover. (Figure 8)

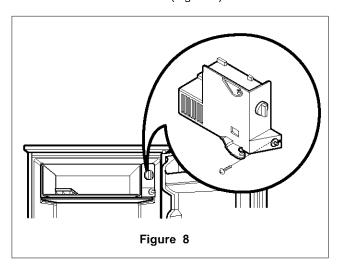


3. Pull out thermostat in the theremostat cover, and disconnect lead wires. (Figure 9)

NOTE: Replace a new thermostat with proper specification.

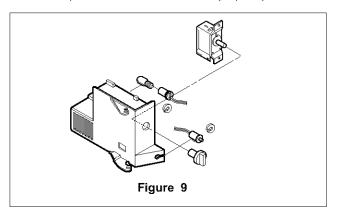

C. COMPRESSOR AND PTC

- Remove Clamp, Protector Cover, Power Cord and Lead Wire first. (Figure 10)
- 2. Separate OLP.
- 3. Separate PTC.
- 4. Remove the Compressor Base by loosening 4 bolts fixed to base plate of the set. (Figure 11)

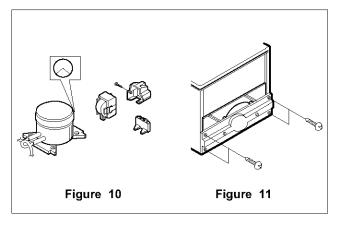


5. Remove the Compressor by loosening 2 earth screws next to Compressor.

NOTE: Replace the Compressor, after peeling off painted part of earth terminal.

- Compressor inhales the gas evaporated from Evaporator and condenses this gas and then delivers to Condenser.
- PTC is abbreviation of Positive Temperature Coefficient and is attatched to the Compressor, and operates motor.
- OLP prevents Motor coil from being started inside Compressor.
- Do not turn the Adjust Screw of OLP in any way for normal operation of OLP.

CIRCUIT DIAGRAM

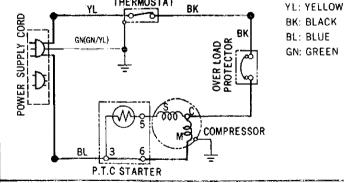

P.T.C STARTER


THE PLUG TYPE ON CIRCUIT DIAGRAM IS SUBJECT
TO CHANGE IN DIFFERENT LOCALITIES.

J652-00041C


TROUBLESHOOTING

| DEFECT | EFFECT | CAUSE | REMEDY |
|---|--|--|---|
| GROUP PARTIALLY OR COMPLETELY OUT OF REFRIGERANT CHARGE | Evaporator dose not frost even though motor-compressor runs continually. | An empty refrigerant system indicates a leakage of R134a. This loss is generally to be looked for at the soldering points connecting the various components or in an eventual hole in the evaporator made by the user. | Leakage must be eliminated by resoldering the defective point or substituting the damaged evaporator. |
| EXCESSIVELY FULL | This defect is indicated by the presence of water outside refrigerator near the motor caused by formations of ice on the return tube. | If in the refrigerant system a quantity of R134a is introduced which is greater than that indicated, the excess gas dose not terminate its expansion in the evaporator but proceeds into the return tube. | The system must be emptied and subsequently refilled introducing the correct quantity of R134a. |
| HUMIDITY IN THE SYSTEM | This defect is indicated by the partial frosting of the evaporator and by continual defrosting cycles determined by the interruption of the flow of gas on the evaporator. The motor compressor keeps running. | The refrigerant system is humid when there is a small percentage of water present which, not completely retained by the dehydrator filter, enters into circulation with the Freon and freezes at the capillary exit in the evaporator. | The system must be emptied and then refilled after eliminating the humidity. |
| PRESENCE OF AIR IN THE SYSTEM | Poor performance of the refrigerant system which is indicated: on the evaporator with a slight frost which dose not freeze and an excessive overheating of the condenser and motor-compressor. | There is air in a refrigerating system when during the filling phase vacuum is not effected or it is not adequately done. | Group must be drained and subsequently refilled after carefully creating vacuum. |
| BLOCKED CAPILLARY | Because of the lack of circulation Freon in the system, there is no frosting of the evaporator, while a slight overheating of the first spiral of the condenser is noted. | Eventual impurities contained in the Freon or in the components of the refrigeration system before assembly and not retained by the filter can obstruct the capillary. | To restore the system it must be emptied, substitute the capillary or the evaporator entirely in case the capillary is coaxial with respect to the return tube, then refill it. |
| MOTOR- COMPRESSOR SHORT-CIRCUITED OR BLOCKED | The system dose not work and the "clixson" intervenes interrupting delivery to the motor-compressor. | In case of short circuit, the breakdown is due to the electric winding: if blocked, there is a mechanical failure in the motor-compressor. | The motor-compressor must be replaced and then proceed with refilling. |
| MOTOR- COMPRESSOR DOSE NOT COMPRESS | No frost forms on the evaporator even if the motor-compressor is apparently running regulary. | In this case there is a mechanical failure in the diaphram valves which: remaining continually open, do not permit the piston to suck and compressor the which consequentely dose not circulate in the system. | The motor-comprossor must be replaced and then proceed with refilling. |
| NOISY MOTOR- COMPRESSOR | In case of mechanical failure in the motor-compressor there in an excessive noise when the system is functioning: in case a suspension spring is unhooked, banging will be heard and there will be especially strong vibrations when the system starts up and stops. | The cause of the excessive noise is normally to be sought for in a mechanical break down, and only rarely in the unhooking of one of the suspension springs. | The motor-comprossor must be substituted and then proceed with the refilling. |


NO COOLING

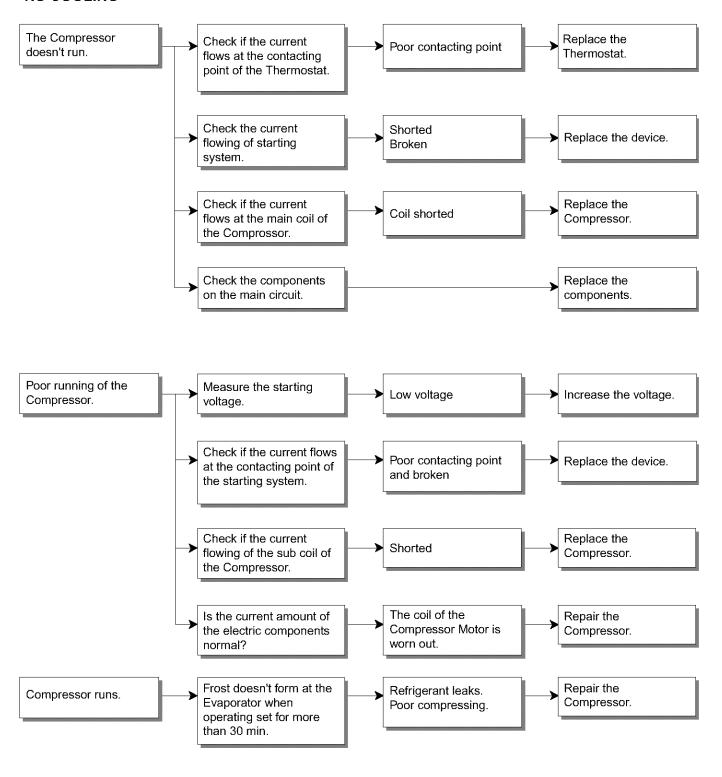



COMPRESSOR AND ANOTHER ELECTRIC COMPONENTS

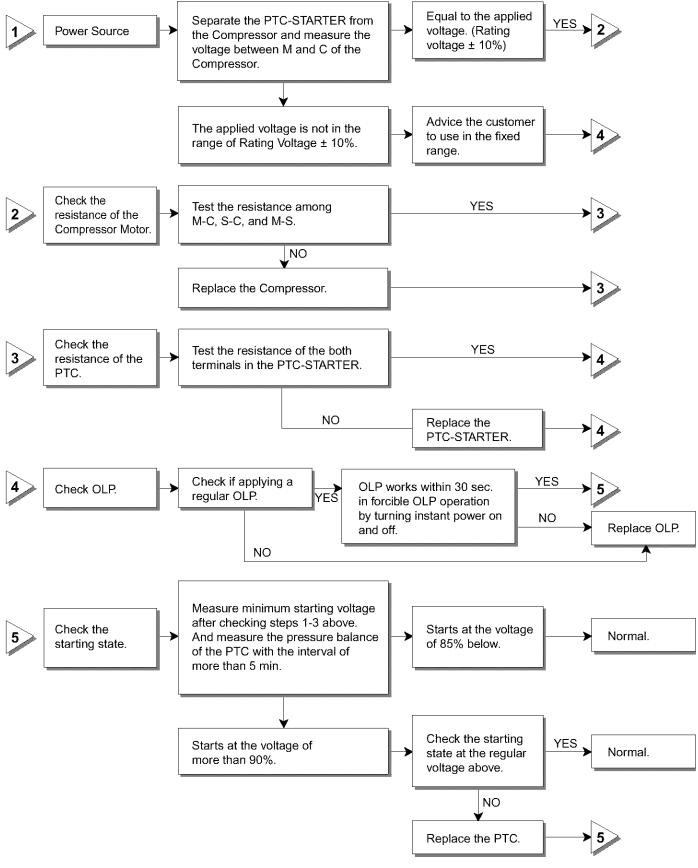



PTC

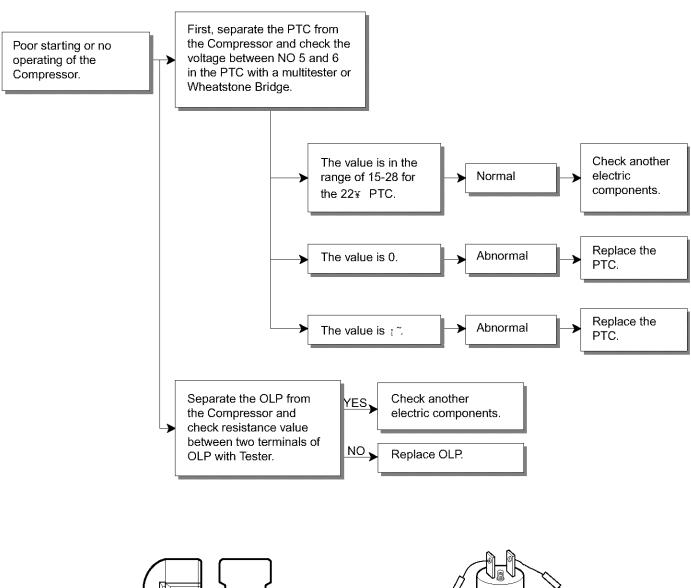

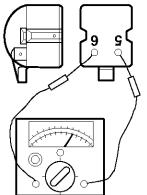

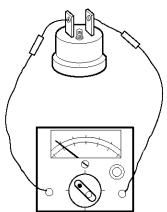

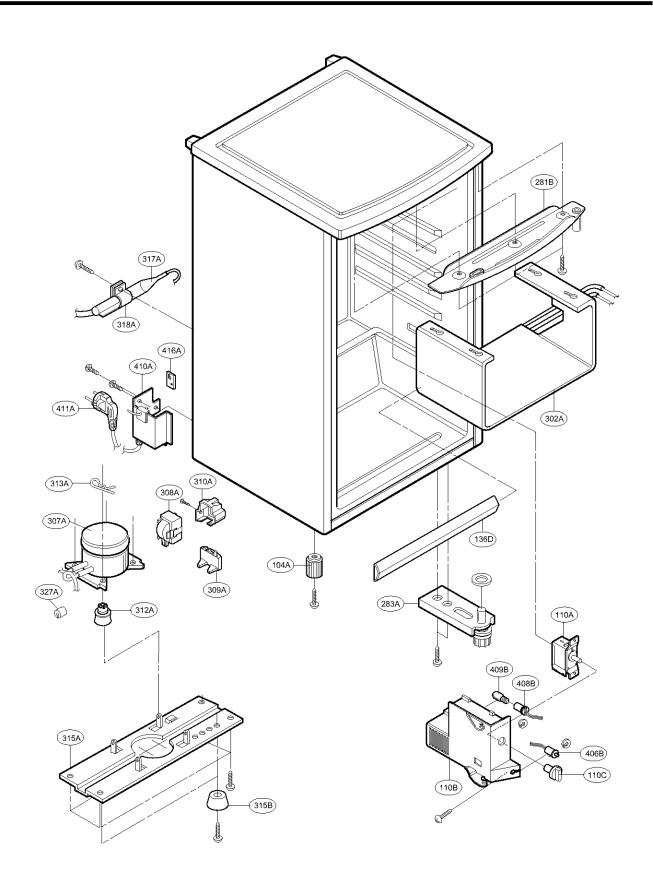

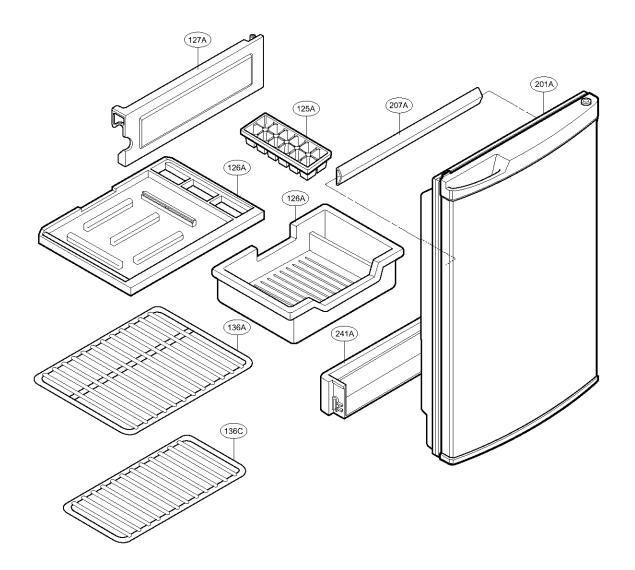

HOME DEPOT(HDP) Electrical Specification

| ITEM | GR-051SF | GR-131SF | GR-151SF |
|----------------------------|-------------|-----------|-------------|
| BUYER MODEL NAME | GR-051SF | GR-131SPF | GR-151SPF |
| RATED INPUT(W) | 70±15% | 70±15% | 70±15% |
| DEFROST INPUT(W) | | - | - |
| ENERGY CONSUMPTION(kwh/yr) | 288 | 330 | 350 |
| AMPERE(Amp) | 0.84 | 1.0 | 0.7 |
| RATING(V/Hz) | 115/60 | 115/60 | 115/60 |
| REFRIGERANT | R134a | R134a | R134a |
| CHARGE(Oz) | 1.41 | 2.12 | 3.35 |
| COMPRESSOR | NS24LBCM | NS24LBCG | NS30LACM |
| OLP | 4TM232NFB | 4TM232NFB | 4TM265MFB |
| PTC | P6R8MD | P6R8MC | P6R8MD |
| CAPACITOR-R | 10μF/250VAC | - | 10µF/250VAC |
| CAPACITOR-S | - | - | - |